

HOW TO INSTALL YOUR SAVUR **FULL HANDLE**



Tools needed: Safety glasses, utility knife, fine grit sandpaper, measuring tape, masking tape, paper towel and alcohol wipes. (You may also need a drill with a 1/4" drill bit, and a Dremel tool with a metal cutting wheel or a metal saw.)

1 UNPACK YOUR KIT

Parts included: Fully assembled Savur Full Handle Rod Float, 2-part Epoxy and mixing stick.



2 BEGIN ROD PREPARATION

Use a knife to remove the end of the grip to find and expose the end of the rod blank.



3 FLUSH!!

Make the end of the exposed rod blank flush. The end of your rod blank is the point that you will measure from.



4 REMOVE OBSTRUCTIONS

(AS NEEDED) Some rods may have counter weights or excessive amounts of epoxy plugging the blank. In either situation, drill through the obstruction using a 1/4" drill bit.



5 MEASURE

From the end of the flush rod blank, make 3-4 marks around the circumference of the handle at 1-3/8".



6 PROTECT YOUR HANDLE

Using masking tape, tightly wrap a couple of rounds connecting the marks that you made at 1-3/8" from the end of the blank. This will protect the handle that you intend to keep clean.



7

REMOVE HANDLE

Use a sharp knife to cut around the circumference of the handle at the base of the tape. Then make some perpendicular cuts. Remove the handle material. Sand paper can be used to clean up your blank.



8

DRY FIT

If needed, add a few rounds of masking tape to the exposed rod blank, leaving exposed rod blank on both sides of your tape. (To ensure the best fit, the body should fit snugly on your rod before epoxy is applied.)



9

PREP FOR EPOXY

Ready your paper towel and alcohol wipes. Follow the mixing instructions provided on the epoxy packages.



10

APPLY EPOXY

Apply the epoxy to the prepared surface. It'll begin to harden in three minutes.

11

AFFIX AND ALIGN

Push your Savur Rod Float with a twisting motion, then align the Savur logo to the top of the rod. On spinning rods, the Savur Logo should be opposite the reel facing up.



12

CLEAN UP


Clean off excess epoxy with a paper towel, then immediately use the alcohol wipe to remove epoxy residue.



13

FINISH!

Remove the tape protecting your handle and let the epoxy cure for 3 hours minimum.

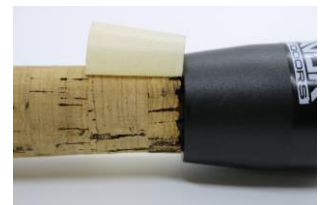

THANK YOU and...
tight lines!!

THANK YOU FOR RELYING ON SAVUR OUTDOORS TO PROTECT YOUR FULL HANDLE RODS.

WATCH THE SAVUR FULL HANDLE INSTALLATION VIDEO AT SAVUROUTDOORS.COM > HOW TO.

SEND QUESTIONS TO: SALES@SAVUROUTDOORS.COM

